


## INSTRUCTION MANUAL APN AND BASIC NETWORK CONFIGURATION Apple iPhone 11

### STEP 1


#### **Insert Geoverse SIM Card:**

This step follows the same process as inserting any other SIM card. Insert the SIM and skip to step 2 or follow the instructions below to learn how.

Remove the SIM from the larger card.

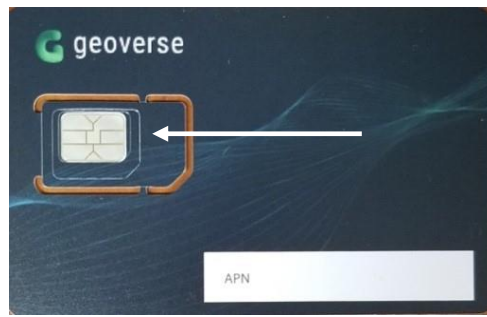


Insert the SIM removal pin that came with your phone into the hole in the small tray on the right side of your phone. You may have to apply some pressure to open it. Place the SIM Card into the tray and close it. If the phone is off, turn it on, otherwise, reset it.

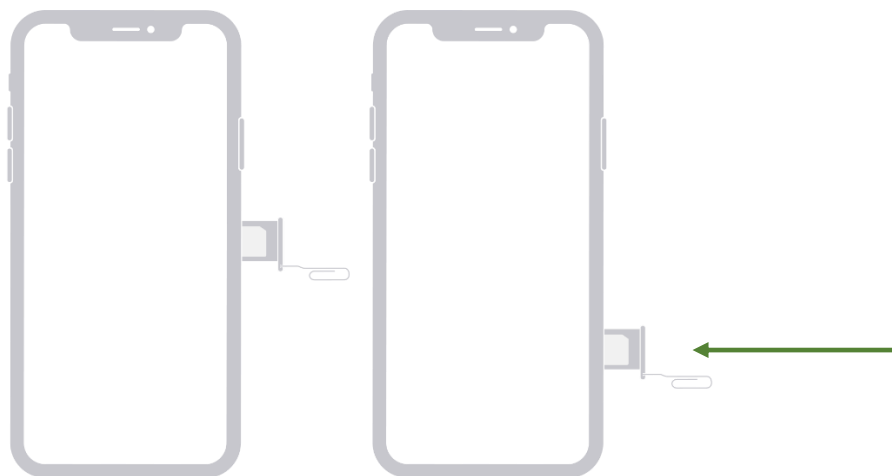


**To set up the APN on a Dual-SIM iPhone 11:**


1. Navigate to your iPhone's Settings menu, then to the Cellular menu

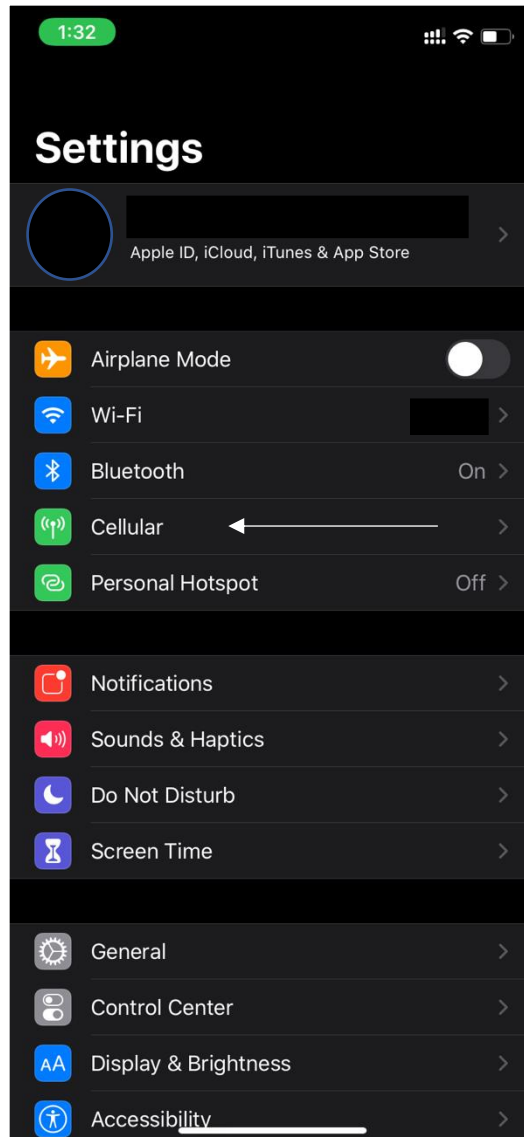

2. Select the SIM you want to choose from the cellular plans.

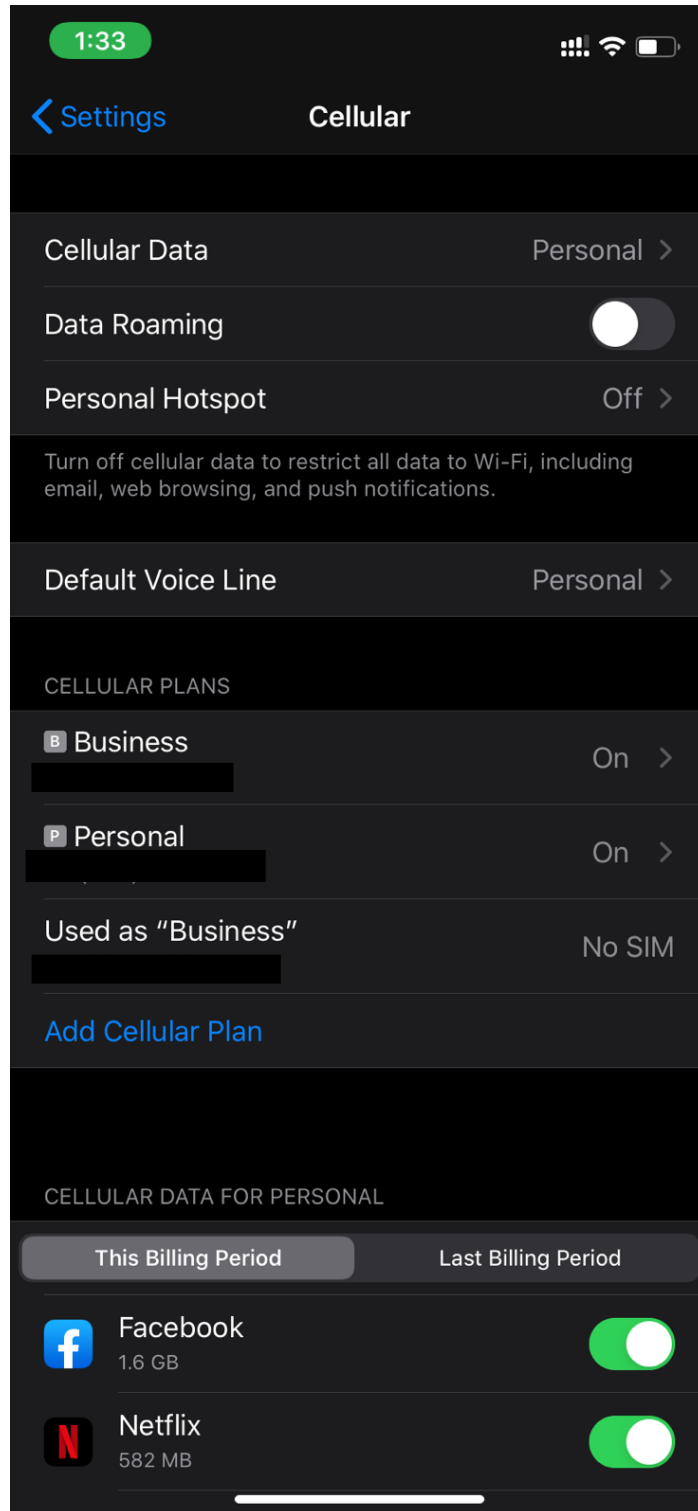

3. Confirm that the Voice and Data setting has VoLTE turned on. (This step is still critical regardless of if your phone has a phone number). If VoLTE is off, turn it on.

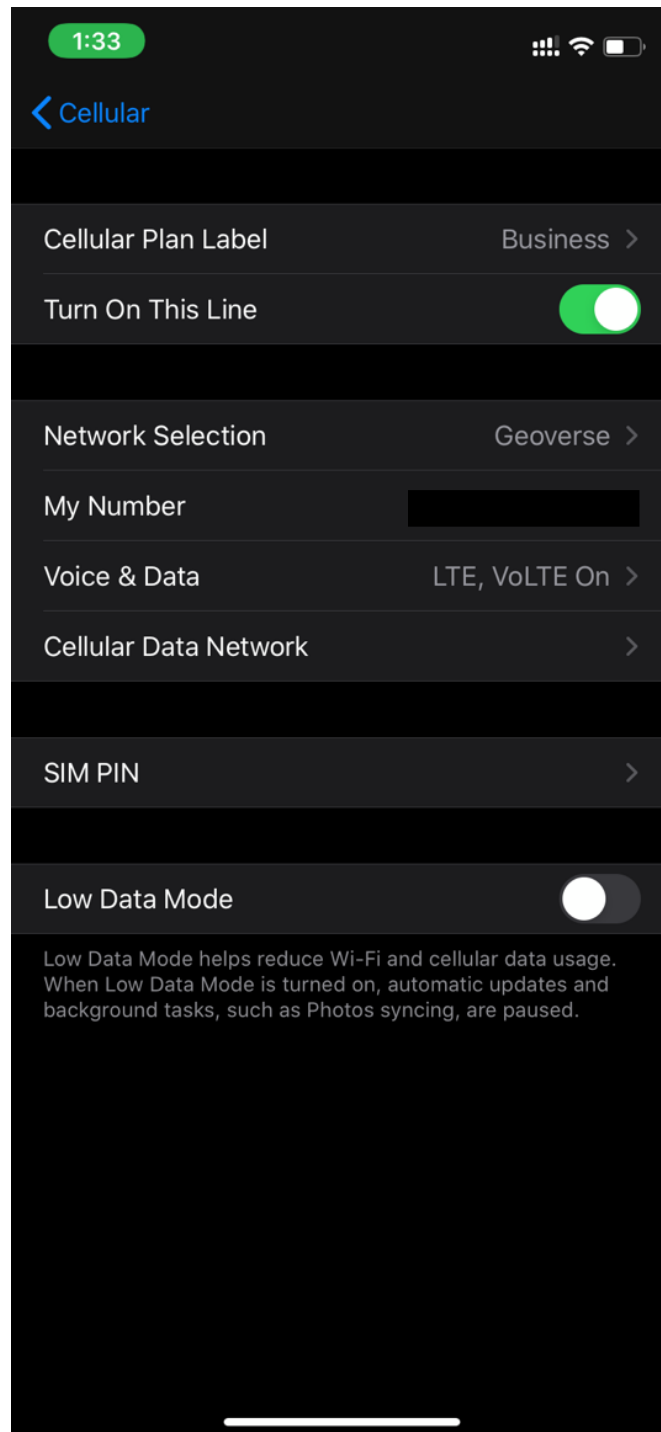

- 4. Then go to Cellular Data Network, then APN
- 5. Type Geoverse [your APN] in both the APN fields.

